

KAWAI

Concert Artist
Hymn Player

Using Hymn Player

Hymn Player Song Lists

About the Hymn Player

■ Introduction

This booklet contains instructions for using the Hymn Player feature of the Concert Artist digital piano.

The Hymn Player adapts the instrument's Concert Magic function to offer an additional 88 classical hymns of the faith. These hymns can be played automatically or 'conducted' by rhythmically tapping on the keyboard.

To enjoy performing using the Hymn Player, simply select the desired hymn, then tap any of the 88 piano keys with a steady rhythm and tempo. The Hymn Player will provide the correct melody and accompaniment notes, regardless of which keys are played. With the Hymn Player, anybody, young or old can enjoy performing classic hymns from the moment they sit down at the Concert Artist digital piano.

■ Hymn Player Song List

The **Hymn Player Song List** section lists the 88 hymns available in Hymn Player mode and 32 hymns available in Prelude mode. Both lists show the song name, selection key, and arrangement type as an abbreviation.

Abbreviation	Arrangement type	Playing method
EB	Easy Beat	Tap a constant steady beat on any key on the keyboard.
MP	Melody Play	Tap the rhythm of the melody on any key of the keyboard.
SK	Skillful	Tap the rhythm of the melody and the accompaniment on any key of the keyboard.

* For more information about the different Concert Magic/Hymn Player arrangement types, please refer to the Concert Magic instructions on page in the main Concert Artist owner's manual.

■ Table of Contents

Using Hymn Player	4
1. Turning Hymn Player On/Off.....	4
2. Prelude Mode.....	5
3. Playing (Listening to) a Hymn.....	6
4. Performing a Hymn.....	7
5. Hymn Player settings.....	8
Hymn Player Song Lists	9
Prelude Mode Song List.....	9
Hymn Player Song List.....	10

Using Hymn Player

1 Turning Hymn Player On/Off

The Hymn Player function must first be enabled in the 'Basic Settings' menu before the additional features can be accessed from the Music Menu.

1. Entering the Basic Settings menu

 
 
While the normal playing mode screen is shown in the LCD display:

Press the **2** FUNCTION button (EDIT).

The LED indicator for the **2** FUNCTION button will turn on, and the Function menu will be shown in the LCD display.



Press the **2** FUNCTION button (ENTER) again to enter the Basic Settings menu.

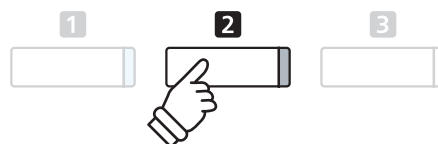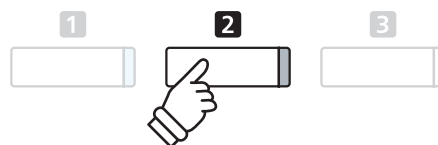

2. Enabling the Hymn Player functions

Press the ▼ or ▲ buttons to select the Hymn Player setting.

 
Press the ◀ or ▶ buttons to turn the Hymn Player On or Off.



When set to 'On', the Hymn Player function replaces the standard Concert Magic songs with 88 hymns of the faith.

In addition, the standard Demo mode will be replaced by a special 'Prelude' mode in which a selection of the 88 hymns will play repeatedly for use as prelude music.

To return to using the standard Demo and Concert Magic functions/songs, set the Hymn Player setting to 'Off'.

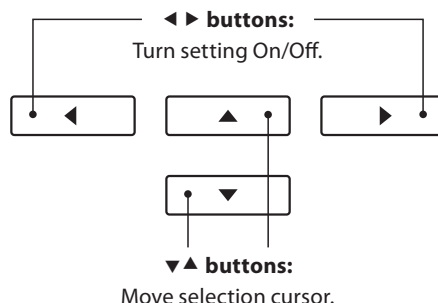

* The 'User Memory' function can be used to store the preferred Hymn Player on/off setting, allowing the Hymn Player to be enabled automatically every time the Concert Artist digital piano is turned on. Please refer to the main owner's manual for more information.

3. Exiting the Hymn Player setting

Press the **3** FUNCTION button (BACK) to exit the Hymn Player setting and return to the Function Menu screen.



2 Prelude Mode

With the Hymn Player setting enabled in the 'Basic Settings' menu, a special Prelude feature will replace the standard Demo mode, playing a selection of hymns repeatedly for use as prelude or postlude music. For a complete listing of available hymns, please refer to the 'Prelude Mode Song List' on page 8 of this booklet.

1. Entering Prelude mode

 
 
While the normal playing mode screen is shown in the LCD display:

Press the **3** FUNCTION button (MUSIC), then press the ▼ or ▲ buttons to select Prelude mode.



Press the **2** FUNCTION button (ENTER) to enter Prelude mode.

One of the 32 prelude hymns will be selected at random and will start to play, with the name of the hymn shown in the LCD display.

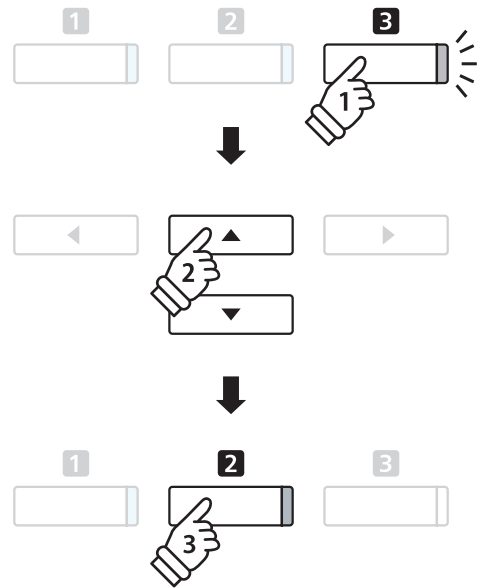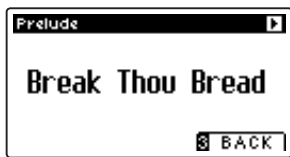


* Each hymn will be played for two verses.

* At the end of the second verse, there will be a brief pause before the next hymn starts. Playback will then continue in list order.

2. Controlling hymn playback

Press the PLAY/STOP button to stop/start hymn playback.

 Press the SOUND buttons to select the desired sound to be used for hymn playback.

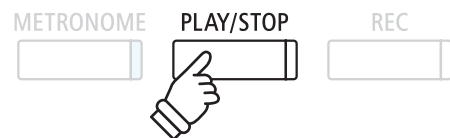

3. Exiting Prelude mode

Press the **3** FUNCTION button (BACK) to exit Prelude mode and return to the Music Menu screen.



3 Playing (Listening to) a Hymn

The Hymn Player features 88 classic hymns, with each hymn assigned to one of the 88 piano keys. The hymns are classified into six different categories: Classic, Christmas, Thanksgiving, Easter, Patriotic, and Wedding. For a complete listing of available hymns, please refer to the 'Hymn Player Song List' on page 9 of this booklet.

1. Entering Hymn Player mode

 
While the normal playing mode screen is shown in the LCD display:

Press the **3** FUNCTION button (MUSIC), then press the **▼** or **▲** buttons to select Hymn Player mode.



Press the **2** FUNCTION button (ENTER) to enter Hymn Player mode.


The name of the first hymn will be shown in the LCD display.

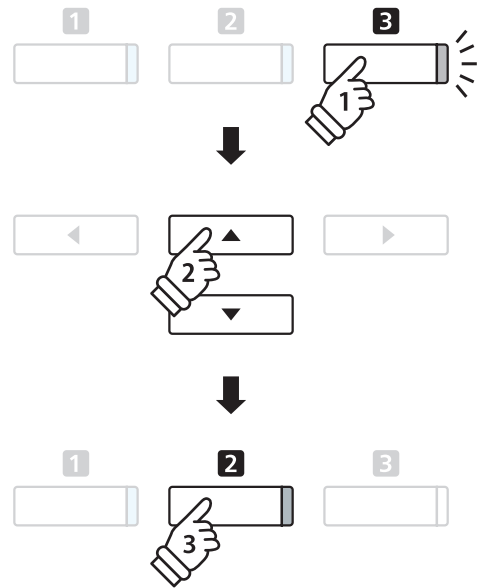

2. Selecting a hymn

Press and hold the **2** FUNCTION button (EDIT), then press the key to which the desired hymn is assigned (page 9).

 
The number and name of the selected hymn will be shown in the LCD display.

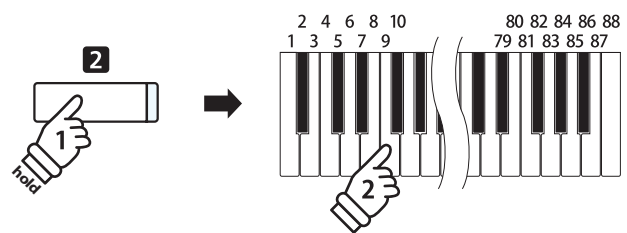

3. Playing the selected hymn

Press the PLAY/STOP button.

 The LED indicator for the PLAY/STOP button will turn on and the selected hymn will start to play.

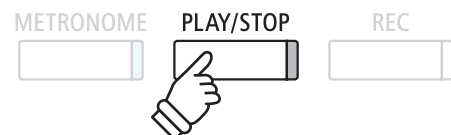

Each hymn will play for one verse, before the next hymn in the same category is selected automatically and starts to play.

* Press the SOUND buttons to select the desired sound to be used for hymn playback.

* The playback tempo and volume of the melody/accompaniment parts of the hymn can be adjusted using the Hymn Player settings menu. Please refer to page 8 of this booklet for more information.

 
4 Performing a Hymn

The Hymn Player allows complete beginners to 'conduct' hymns by simply tapping the keyboard with a steady rhythm and tempo.

1. Entering Hymn Player mode


While the normal playing mode screen is shown in the LCD display:

Press the **3** FUNCTION button (MUSIC), then press the **▼** or **▲** buttons to select Hymn Player mode.

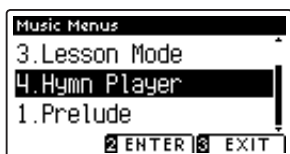

Press the **2** FUNCTION button (ENTER) to enter Hymn Player mode.

 
The name of the first hymn will be shown in the LCD display.

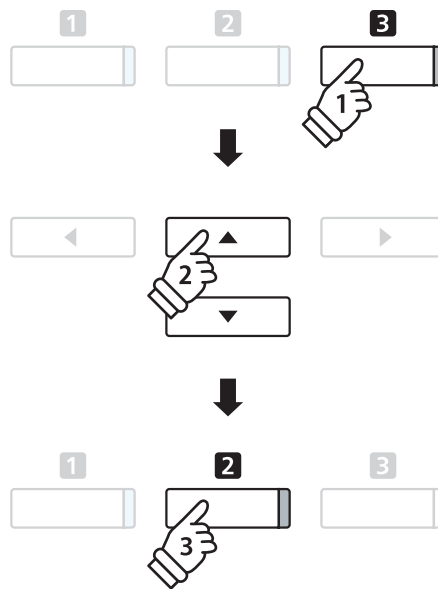

2. Selecting a hymn

Press and hold the **2** FUNCTION button (EDIT), then press the key to which the desired hymn is assigned (page 9).

 The number and name of the selected hymn will be shown in the LCD display.

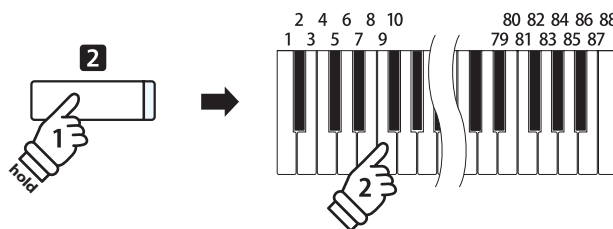


3. Performing the selected hymn

Press a key on the keyboard with a constant steady beat.

The hymn will advance with every key that is pressed. Pressing the keys gently will produce a soft sound, while pressing heavily will produce a loud sound.



 The hymn will repeat continuously from the beginning.

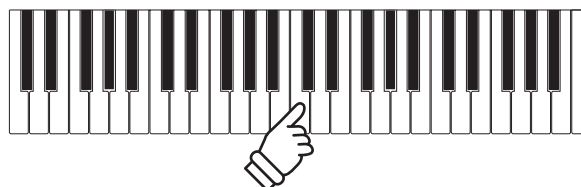

* Press the SOUND buttons to select the desired sound to be used for hymn playback.

* The volume of the melody/accompaniment of the hymn can be adjusted using the Hymn Player settings menu. Please refer to page 8 of this booklet for more information.

5 Hymn Player settings

The Hymn Player settings menu allows the playback tempo, playing mode, and volume balance to be adjusted.

Hymn Player settings



Hymn Player setting	Description	Default setting
Tempo	Adjust the playback tempo of the Hymn Player hymn in beats per minute (BPM).	Song specific
Mode	Change the Hymn Player playing mode (see below).	Normal
Balance	Adjust the volume balance between the melody and accompaniment parts.	10

Entering the Hymn Player settings menu

While Hymn Player mode is in use:

Press the **2** FUNCTION button (EDIT).

  The LED indicator for the **2** FUNCTION button will turn on, and the Hymn Player settings menu will be shown in the LCD display.

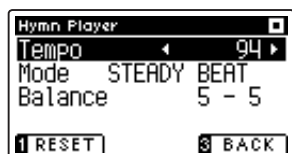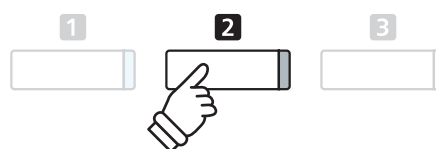


Adjusting Hymn Player settings

After entering the Hymn Player settings menu:

Press the **▼** or **▲** buttons to move the selection cursor over the desired setting.

Press the **◀** or **▶** buttons to adjust the selected setting.

 *To reset the current setting to the default value, press the **1** FUNCTION button (RESET).

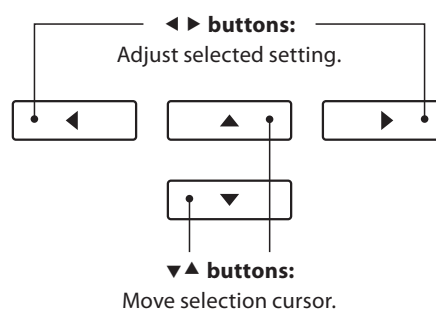

Steady Beat mode

Steady Beat mode allows all Hymn Player songs to be played by simply tapping any key with a constant steady beat, regardless of the song arrangement type.

Hymn Player Song Lists

■ Prelude Mode Song List

Hymn Name	Key	Mode
Classic		
A Mighty Fortress	A0	SK
Abide With Me	A#0	SK
Be Still, My Soul	D1	MP
Amazing Grace	C1	MP
Be Thou My Vision	D#1	SK
Blessed Assurance, Jesus is Mine	E1	MP
Break Thou the Bread of Life	G1	SK
Fairest Lord Jesus	C#2	MP
For the Beauty of the Earth	D#2	SK
Faith of Our Fathers	D2	MP
Great is Thy Faithfulness	F#2	MP
Holy, Holy, Holy	A2	SK
Have Thine Own Way, Lord	G2	MP
I Surrender All	D3	MP
I Need Thee Every Hour	C#3	MP
How Great Thou Art	B2	MP
Spirit of the Living God	B4	SK
Sweet Hour of Prayer	D5	MP
It is Well With My Soul	D#3	MP
Just As I Am, Without One Plea	G3	MP
My Jesus, I Love Thee	B3	MP
Rock of Ages	A4	MP
Take My Life and Let It Be Consecrated	D#5	SK
Take Time to Be Holy	E5	MP
Savior, Like a Shepherd Lead Us	A#4	MP
The Church's One Foundation	F5	MP
Trust and Obey	B5	MP
The Old Rugged Cross	G5	MP
Turn Your Eyes Upon Jesus	C6	SK
This is My Father's World	A5	MP
What A Friend We Have in Jesus	D6	MP
When I Survey the Wondrous Cross	D#6	SK

Hymn Player Song Lists

Hymn Player Song List

Hymn Name	Key	Mode
Classic		
A Mighty Fortress	A0	SK
Abide With Me	A#0	SK
All Hail the Power of Jesus Name	B0	MP
Amazing Grace	C1	MP
Ave Maria (Schubert)	C#1	SK
Be Still, My Soul	D1	MP
Be Thou My Vision	D#1	SK
Blessed Assurance, Jesus is Mine	E1	MP
Blessed Be the Name	F1	MP
Blest Be the Tie That Binds	F#1	MP
Break Thou the Bread of Life	G1	SK
Come Thou Fount of Every Blessing.	G#1	MP
Come, Holy Ghost	A1	SK
Come, Thou Almighty King	A#1	MP
Crown Him with Many Crowns	B1	SK
Doxology	C2	SK
Fairest Lord Jesus	C#2	MP
Faith of Our Fathers	D2	MP
For the Beauty of the Earth	D#2	SK
Gloria Patri	E2	MP
God Be with You 'Til We Meet Again	F2	MP
Great is Thy Faithfulness	F#2	MP
Have Thine Own Way, Lord	G2	MP
Holy God, We Praise Thy Name	G#2	SK
Holy, Holy, Holy	A2	SK
How Firm a Foundation	A#2	MP
How Great Thou Art	B2	MP
I Heard the Voice of Jesus Say	C3	SK
I Need Thee Every Hour	C#3	MP
I Surrender All	D3	MP
It is Well With My Soul	D#3	MP
Jesus Loves Me, This I Know	E3	MP
Jesus Loves the Little Children	F3	MP
Joyful, Joyful, We Adore Thee	F#3	MP
Just As I Am, Without One Plea	G3	MP
Lead On, O King Eternal	G#3	MP
Leaning on the Everlasting Arms	A3	SK
Love Divine All Loves Excelling	A#3	MP
My Jesus, I Love Thee	B3	MP
My Savior's Love (I Stand Amazed)	C4	MP
Nothing But the Blood	C#4	MP
O God Our Help in Ages Past	D4	SK
O How I Love Jesus	D#4	MP
O Worship the King	E4	SK
Onward, Christian Soldiers	F4	MP
Praise to the Lord, the Almighty...	F#4	SK
Rejoice, the Lord is King	G4	SK
Rejoice, Ye Pure in Heart	G#4	SK
Rock of Ages	A4	MP

Hymn Name	Key	Mode
Classic		
Savior, Like a Shepherd Lead Us	A#4	MP
Spirit of the Living God	B4	SK
Stand Up, Stand Up for Jesus	C5	MP
Standing on the Promises	C#5	MP
Sweet Hour of Prayer	D5	MP
Take My Life and Let It Be Consecrated	D#5	SK
Take Time to Be Holy	E5	MP
The Church's One Foundation	F5	MP
The King of Love My Shepherd	F#5	SK
The Old Rugged Cross	G5	MP
The Solid Rock	G#5	MP
This is My Father's World	A5	MP
To God be the Glory	A#5	SK
Trust and Obey	B5	MP
Turn Your Eyes Upon Jesus	C6	SK
Victory In Jesus	C#6	MP
What A Friend We Have in Jesus	D6	MP
When I Survey the Wondrous Cross	D#6	SK
When We All Get To Heaven	E6	MP
Wonderful Grace of Jesus	F6	SK
Christmas		
Angels We Have Heard On High	F#6	SK
Away in a Manger	G6	MP
Hark the Herald Angels Sing	G#6	SK
It Came Upon the Midnight Clear	A6	MP
Joy to the World	A#6	SK
O Come, All Ye Faithful	B6	SK
O Little Town of Bethlehem	C7	SK
Silent Night	C#7	MP
The First Noel	D7	SK
We Three Kings	D#7	MP
Easter		
Christ the Lord is Risen Today	E7	SK
He Lives	F7	SK
Thanksgiving		
Come Ye Thankful People, Come	F#7	SK
Let All Things Now Living	G7	SK
We Gather Together	G#7	SK
Patriotic		
America the Beautiful	A7	SK
Battle Hymn of the Republic	A#7	MP
Wedding		
Bridal Chorus	B7	MP
Wedding March	C8	SK

KAWAI

THE FUTURE OF THE PIANO

Concert Artist Hymn Player

KPSZ-0536 : 817511

OW1062US-J1203

Version 1

Printed in Indonesia

Copyright © 2012 Kawai Musical Instruments Mfg. Co., Ltd. All Rights Reserved.